

# Mounting information



Hinges 12

Mounting information	
	<p><b>Left / right hinges</b></p> <p>Right or left hinges can be created by the direction in which the bearing bushings are inserted into the hinge leaf.</p>
	<p><b>Mounting on door frames</b></p> <p>Right or left hinges can be created by the direction in which the bearing bushings are inserted into the hinge leaf.</p>
	<p><b>Mounting</b></p> <ol style="list-style-type: none"> <li>1. Position the bearing bushing with the desired installation direction on the hinge leaf. Then insert a screw with a collar such as socket button head screws ISO 7380 into the bearing bushing to protect the bearing bushing collar from damage while pounding in.</li> <li>2. Pound in the bearing bushing until about 1 mm remains between the bearing bushing collar and the hinge leaf.</li> <li>3. Remove the burr on the bearing bushing using a knife.</li> <li>4. Pound in the bearing bushing all the way.</li> <li>5. Remove the screw.</li> <li>6. Pound a tapered dowel pin into the bearing bushing.</li> <li>7. Place the cover cap on the opposite side of the hinge leaf.</li> </ol> <p>Insert the other bearing bushings according to points 1 to 5.</p>